

FUSES & CIRCUIT BREAKERS

1996 Toyota Supra

Fuses & Circuit Breakers
1993-96 Toyota


Supra

IDENTIFICATION

FUSE PANEL LOCATION

There are 2 fuse panels on this vehicle. The driver's side fuse panel is located behind the driver's kick panel. The main fuse and relay panel is in the engine compartment.


FUSE IDENTIFICATION

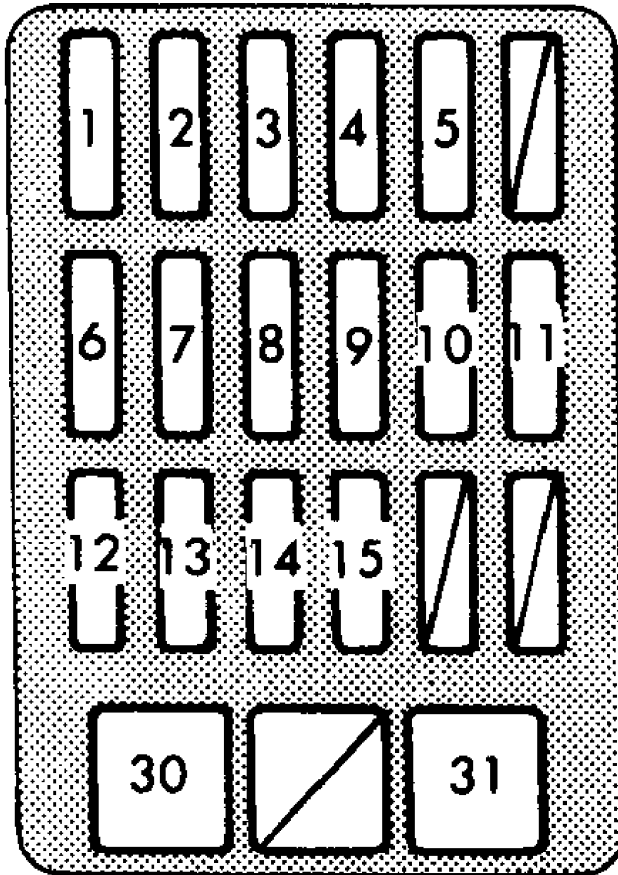

DRIVER'S SIDE KICK PANEL

93C45528

Fig. 1: Passenger Compartment Fuse Panel Identification
Courtesy of Toyota Motor Sales, U.S.A., Inc.

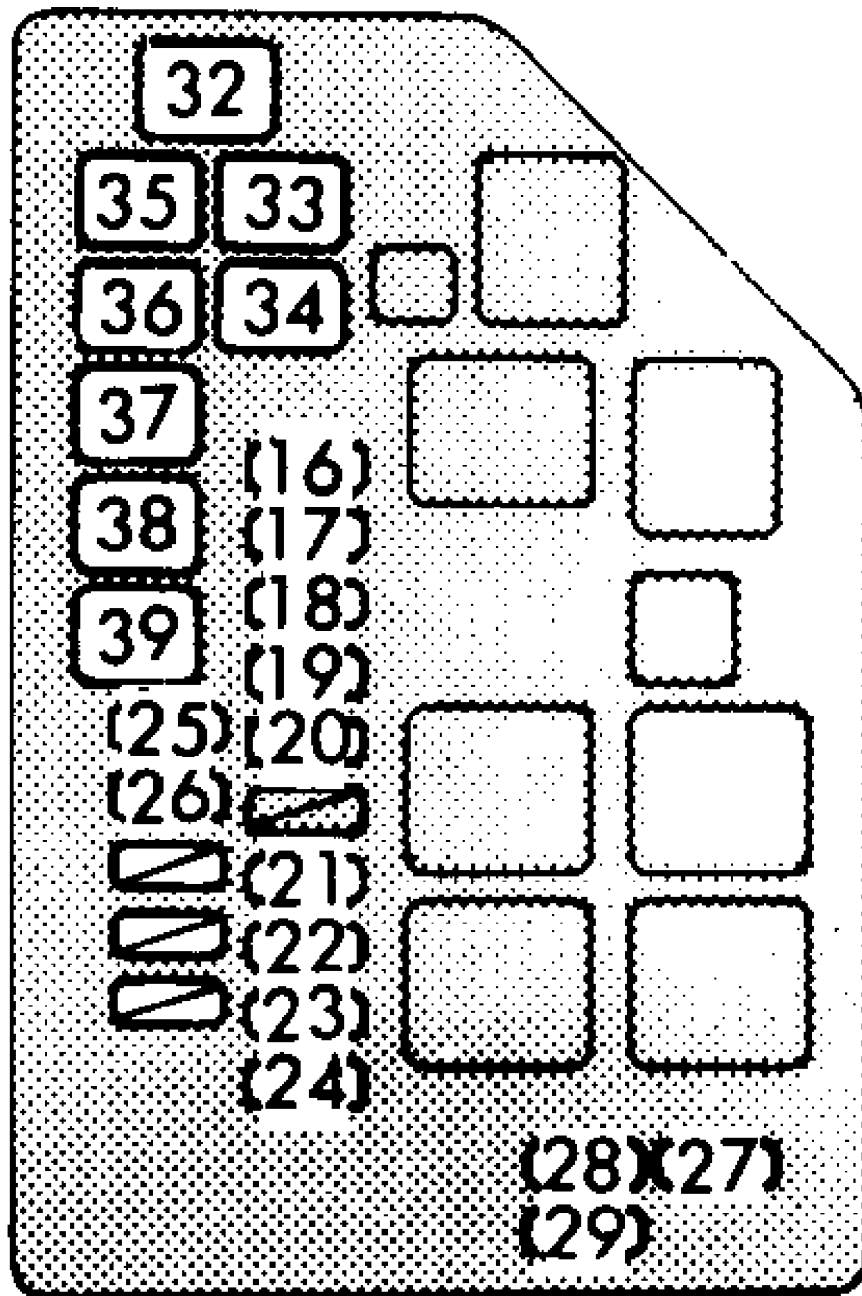

ENGINE COMPARTMENT FUSE BLOCK

93D45529

Fig. 2: Engine Compartment Fuse Panel Identification
 Courtesy of Toyota Motor Sales, U.S.A., Inc.

WARNING: Always disconnect battery ground cable before servicing "high-current" fuses. It is recommended that "high-current"

fuses be replaced by a qualified technician.

- * 1 - 20 Amp
Windshield Wiper/Washer, Rear Wiper/Washer
- * 2 - 7.5 Amp
A/C System
- * 3 - 15 Amp
Seat Heater
- * 4 - 7.5 Amp
Starter System
- * 5 - 7.5 Amp
Charging System, Fuel Injection, Discharge Warning Light,
SRS System (Air Bag)
- * 6 - 10 Amp
Instrument Panel Lights & Control, Daytime Running Lights
- * 7 - 10 Amp
Mirror Heaters
- * 8 - 7.5 Amp
Turn Signals
- * 9 - 15 Amp
Stoplights, Cruise Control Cancel
- * 10 - 15 Amp
A/C, Cigarette Lighter, SRS System, Theft Deterrent, Shift
Lock Control
- * 11 - 7.5 Amp
Radio, Cassette, Power Antenna
- * 12 - 10 Amp
Taillights, Parking & Side Marker Lights, License Plate Light
- * 13 - 10 Amp
Cruise Control, ABS, Power Steering, Power Antenna, Theft
Deterrent, Shift Lock, Traction Control System
- * 14 - 10 Amp
Gauges & Meters, Service Indicators & Buzzers, Defogger,
Charging System, Cruise Control, Electronic Controlled
Transmission, Traction Control System
- * 15 - 10 Amp
A/C, Cruise Control, ABS, SRS System, Traction Control System
- * 16 - 30 Amp
Fuel Injection System
- * 17 - 30 Amp
Fuel Injection System
- * 18 - 30 Amp
Starting System
- * 19 - 15 Amp
Front Foglights
- * 20 - 15 Amp
Horn, Hazard Flashers
- * 21 - 7.5 Amp
Traction Control System
- * 22 - 7.5 Amp
Charging System
- * 23 - 7.5 Amp
Interior Lights, Courtesy Lights, Trunk Light, Ignition
Switch Light, Open Door Light, Theft Deterrent System,
Daytime Running Lights
- * 24 - 20 Amp
Radio & Cassette Player
- * 25 - 15 Amp
Right Headlight
- * 26 - 15 Amp
Left Headlight
- * 27 - Spare
- * 28 - Spare

- * 29 - Spare
- * 30 - 30 Amp
Power Windows, Power Door Locks, Theft Deterrent System
- * 31 - 30 Amp
Rear Window Defogger
- * 32 - 120 Amp
Charging System
- * 33 - 30 Amp
Traction Control System
- * 34 - 50 Amp
Headlights, Starting System
- * 35 - 50 Amp
Air Conditioning
- * 36 - 30 Amp
Electric Cooling Fan
- * 37 - 60 Amp
ABS, Traction Control System
- * 38 - 50 Amp
Electronic Ignition/Distributor Ignition
- * 39 - 60 Amp
Protection for Panel, Stop, Tail, ECU, Defogger, Door Fuses